

PARALLEL ARM MOUNTING (PUSH SIDE)

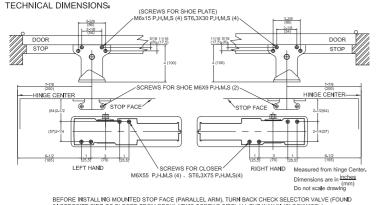

IN OPPOSITE SIDE OF CLOSER FROM REGULATING SCREWS SIDE) ALL THE WAY IN (CLOCKWISE) I

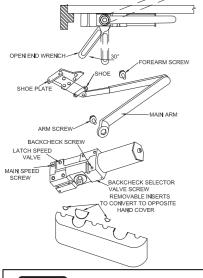

INSTALLATION STEPS:

- 1. Adjust spring power to match door width as indicated by chart on page 1.
- 2. Mount closer on door to dimensions shown, tube end toward latch. Locate closer and shoe from center of hinge

3. Attach arm as follows:

- (A) Place open end wrench on bottom shaft and turn toward hinge iamb about 30°.
- (B) Place main arm on top shaft, insert arm screw into top of shaft and tighten.

4. Attach PA shoe plate to stop as shown.


- 5. Attach rod and shoe to shoe plate as shown. (Offset toward hinge)
- 6. Open door and insert rod in forearm, and Close door.
- 7. With main arm parallel to door, insert forearm screw and tighten.

REGULATION BACKCHECK ATTACH COVER

AS SAME AS PAGE 2 OR PAGE 3.

IMPROPER INSTALLATION OR REGULATION MAY RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE. FOLLOW ALL INSTRUCTIONS CAREFULLY PLEASE.


BHDC1958 DOOR CLOSERS INSTALLATION INSTRUCTION

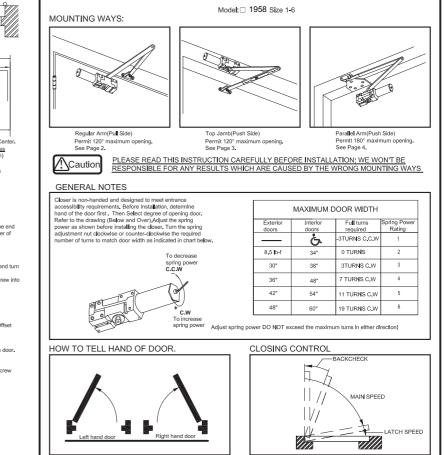

Caution

REGULAR ARM(PULL SIDE)

TECHNICAL DIMENSIONS:

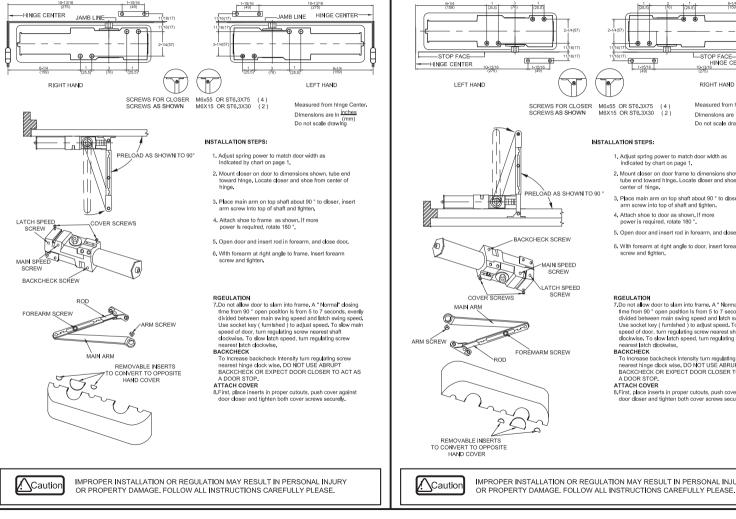

TOP JAMB MOUNTING (PUSH SIDE)

TECHNICAL DIMENSIONS:

