

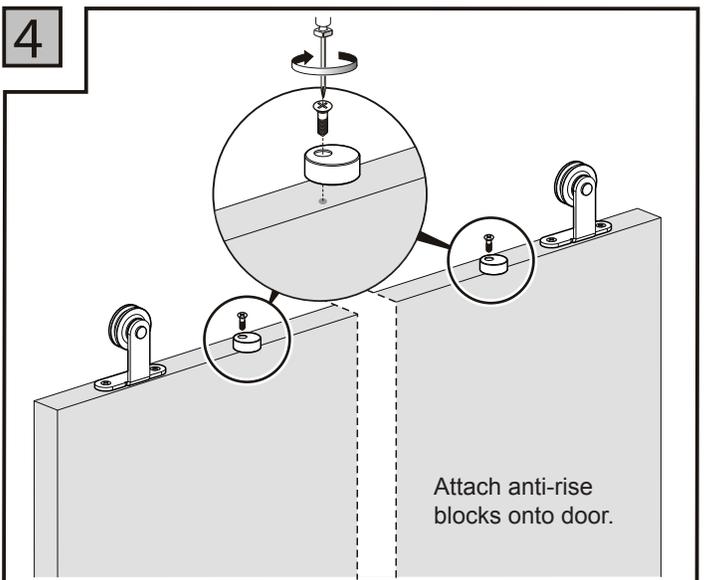
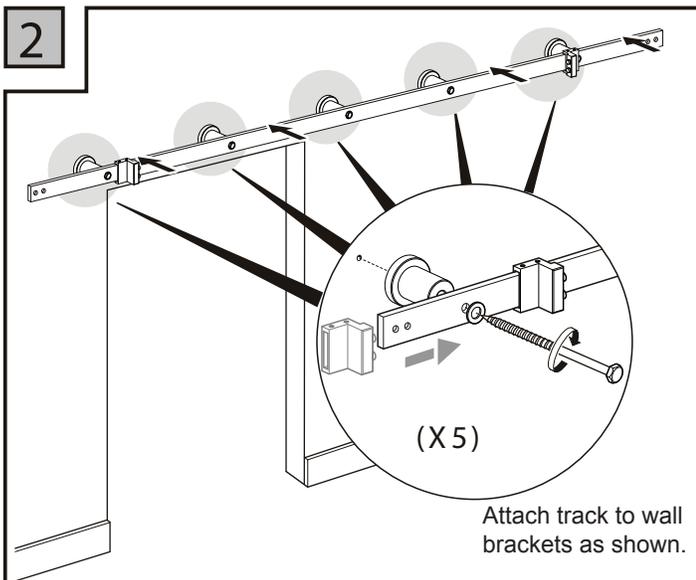
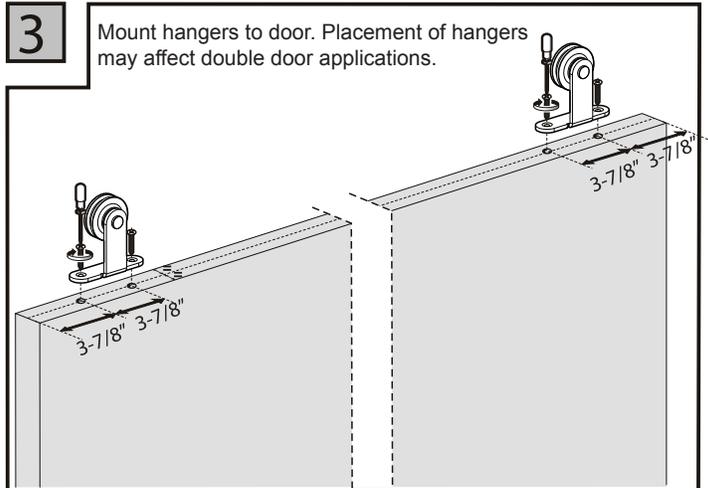
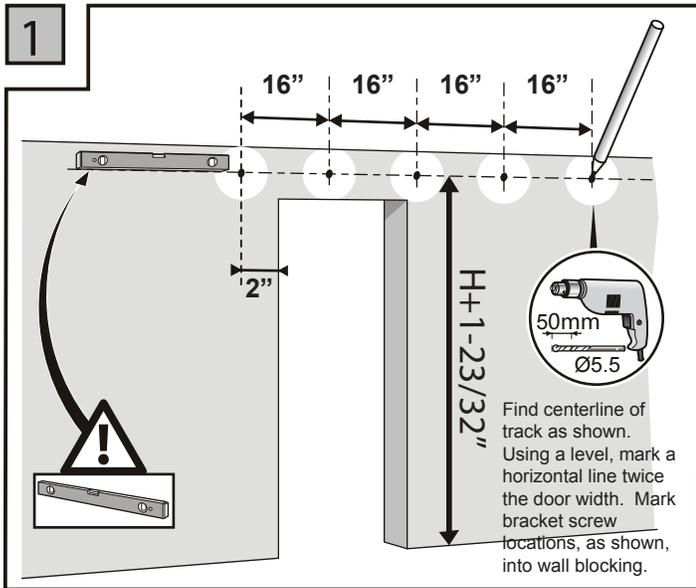
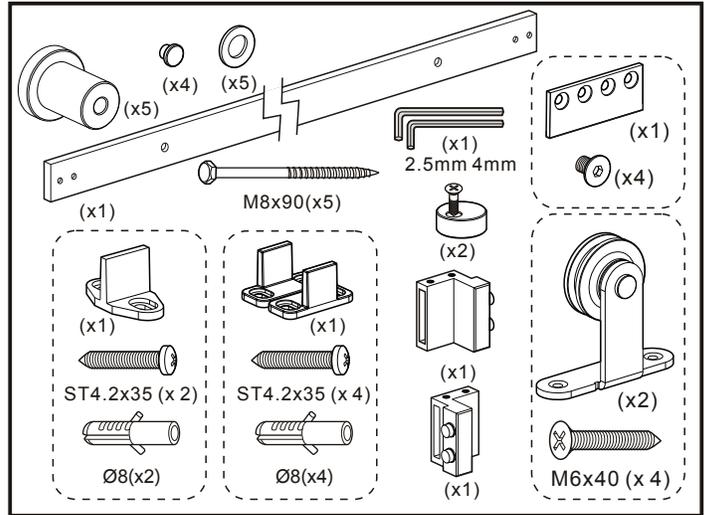
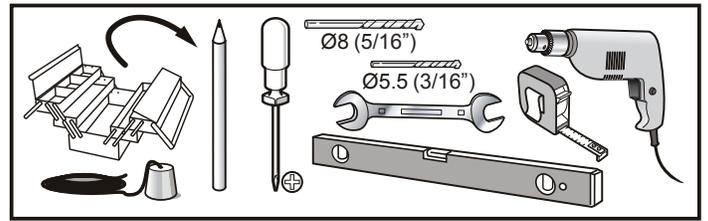


# FTTM-6-6 INSTALLATION INSTRUCTIONS

For more instructions, please visit [orcahardware.com](http://orcahardware.com).

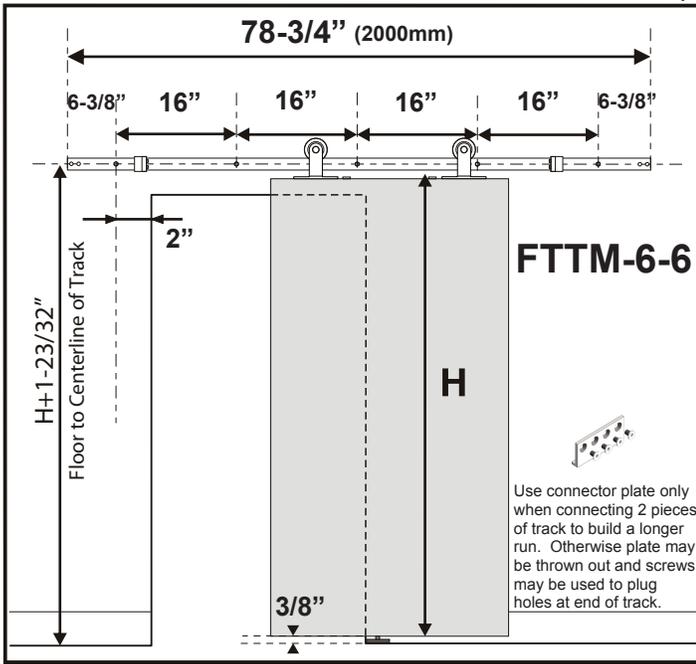


5

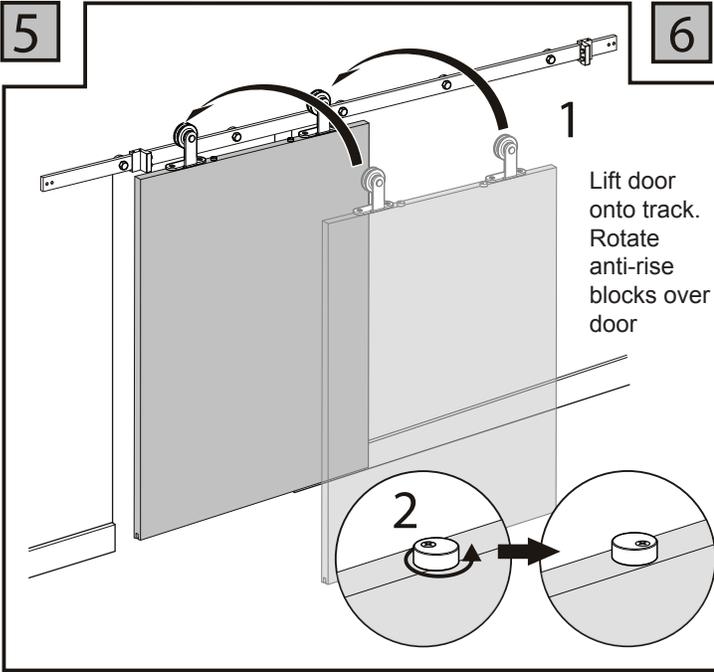

1  
Lift door onto track. Rotate anti-rise blocks over door

6

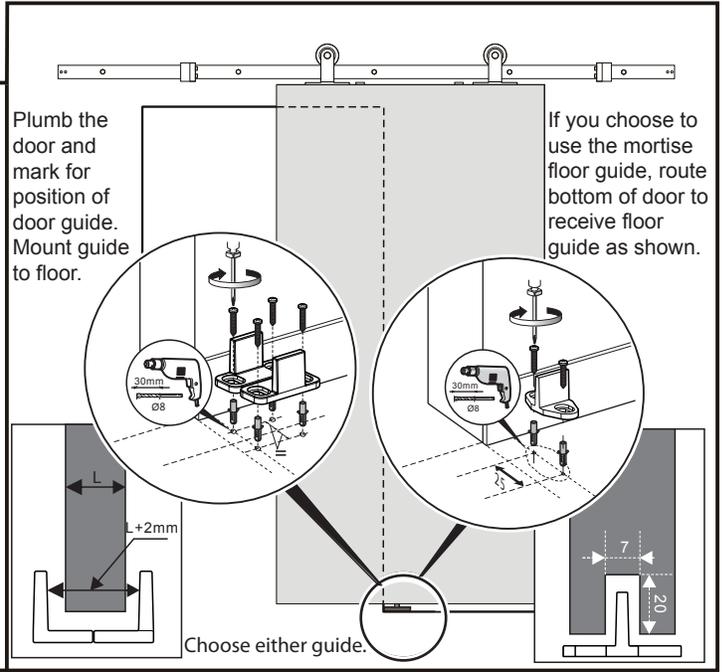


Plumb the door and mark for position of door guide. Mount guide to floor.

If you choose to use the mortise floor guide, route bottom of door to receive floor guide as shown.


Choose either guide.

7

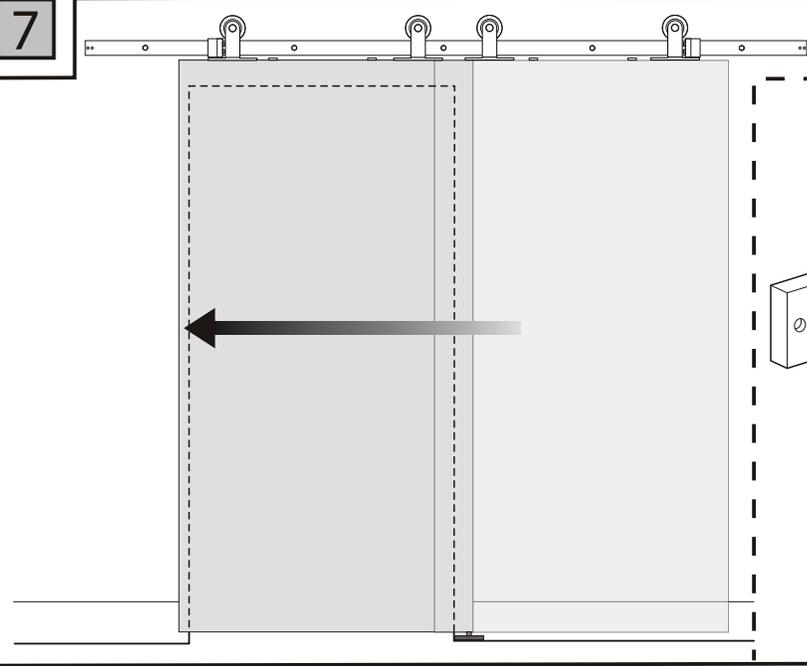


Attach end stops.

Bolts may affect the placement of the end stops.

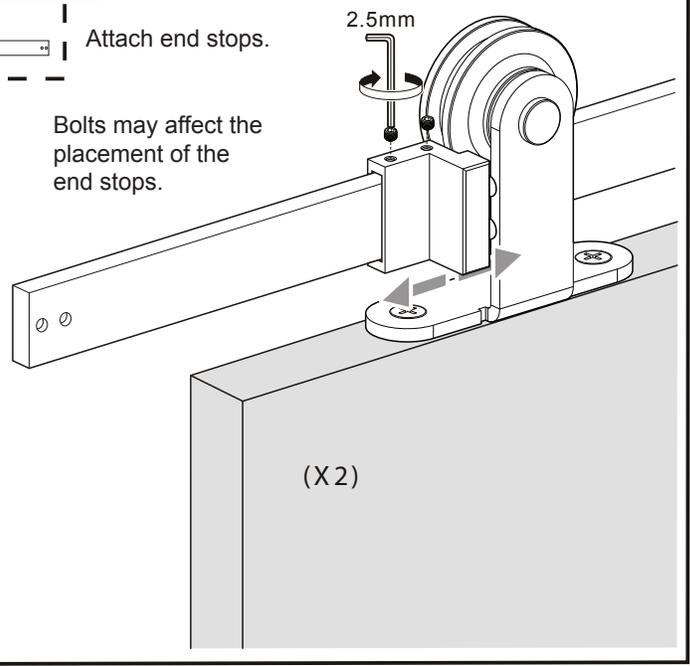

8

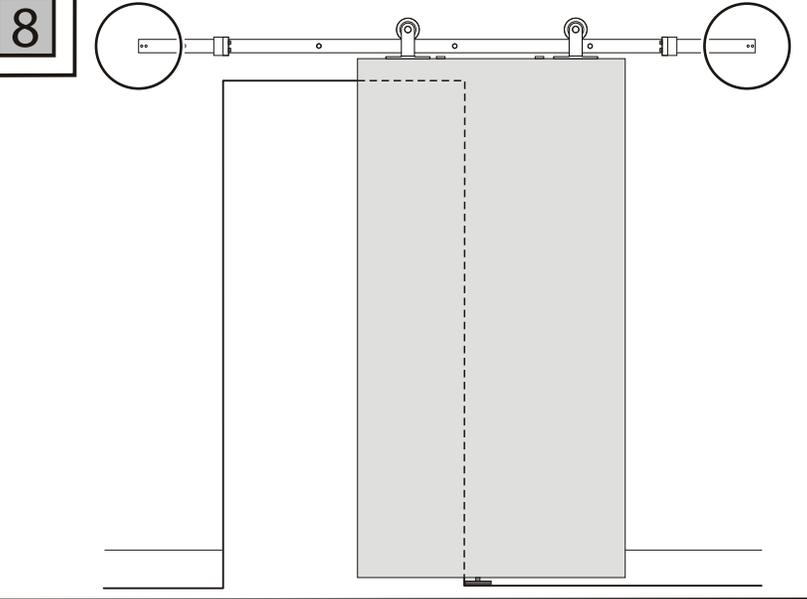

Attach plugs.

